

SIMPLE & EASY


installation



Simplest to install...



c) Remove wheel assembly.

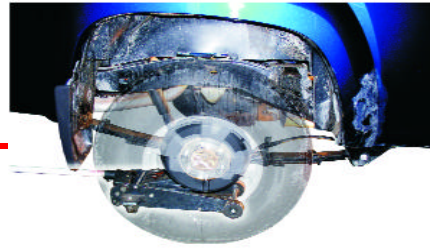

a) Raise vehicle to allow the axle to hang free.



b) Position safety stands to secure vehicle.



d) Remove OEM bump stop.



There are no holes to drill (with the exception of heavy duty applications) and no air lines to route. SES kits can be installed in minutes using basic hand tools.

All Installation Instructions are published in English, French and Spanish.

SES - INSTALLATION MADE EASIER

SIMPLE & EASY installation

TIMBREN SES
Suspension Enhancement Systems




e) Assemble Aeon® rubber spring and bracket as shown on installation instruction sheet.



g) Reinstall wheel assembly. Remove safety stands and lower vehicle. Check for correct positioning and clearances.

AEON® Rubber Spring In Action

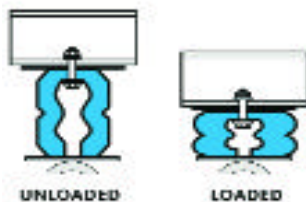

f) Mount Timbren SES assembly using existing holes and Timbren supplied fasteners.

Notes: Check that brake line and brake cable locations do not interfere with Aeon® rubber spring under load.

Simplest to maintain...

There are no air lines or fittings that will leak. Just bolt on the SES kit and you will be set for a lifetime of trouble free service.

